

Introducing the patent pending LifeLamp LuxLast™ "The newest addition to the expanding LifeLamp Light System."

Imagine a light so bright that we recommend you install them 20 feet apart. Imagine the foot candles derived when each of these lights delivers 2,400 Lumens of output. And thanks to our devotion to efficiency; your cost for such a light might just shock you.

• More High Wattage Innovation from your friends at LifeLamp with our lowest profile ever! (Only 1.25" deep)

 2,400 Lumens of Broad Light Distribution delivers 4 foot candles/40 Lux on the floor on 20 foot centers!

 Only 24 Watts of energy delivers never before seen efficiency.

- No spotting on the floor thanks to smartly designed beam spread.
- Save money & Energy; you only need one LifeLamp LuxLast every 20 feet for an average of only 90 Lights per house.
- IP 65 rated; waterproof and dust-proof for stress free lighting and simple periodic cleaning.
- Install directly to electrical box or use our adapter for E26 connection with retrofits.
- Less Lights means more energy Savings.
- Deep Dimming down to 1% of Light output when combined with our LifeLamp Dimmer
- Buy only what you need; one light per box.
- Available in 2700K and 5000K color temperatures
- See how we account for your lighting productivity by examining your cost per lumen from LifeLamp!



MODEL # BR-LUXL24W

Rated for 40,000 hours

Our thermal separator delivers years of bright light thanks to innovative Heat dissipation design



- 1. THREAD THE WIRES FROM YOUR JUNCTION BOX THROUGH THE HOLE LOCATED IN THE MIDDLE OF <u>LIFELAMP</u> BLACK THERMAL SEPARATOR INCLUDED IN THE BOX. PLEASE MAKE SURE THAT THE TWO LARGE "SNAP RIBS" OF THE BLACK THERMAL SEPARATOR ARE FACING AWAY FROM THE JUNCTION BOX WHEN YOU THREAD THE WIRES THROUGH IT.
- 2. TAKE THE <u>LUXLAST LUMENAIRE</u> OUT OF THE BOX AND CONNECT IT TO THE WIRES YOU JUST PULLED THROUGH THE THERMAL SEPARATOR.
- 3. NEXT TAKE THE TWO SCREWS INCLUDED WITH THE THERMAL SEPARATOR AND SCREW THE THERMAL SEPARATOR INTO THE JUNCTION BOX. TAKE CARE NOT TO SCREW THE THERMAL SEPARATOR INTO THE JUNCTION BOX TOO TIGHTLY AS THIS WILL CAUSE THE THERMAL SEPARATOR CONNECTION RIBS TO CONTRACT AND THE LUXLAST LIGHT WILL NOT FIT ONTO THE THERMAL SEPARATOR AS TIGHTLY.
- **4.** PUSH ANY EXCESS WIRE UP INTO THE JUNCTION BOX THROUGH THE CENTER HOLE IN THE THERMAL SEPARATOR.
- 5. SNAP THE LUXLAST LUMENAIRE/LIGHT ONTO THE THERMAL SEPARATOR.
- **6.** FOR VIDEO OF THIS INSTALL PLEASE GO TO: WWW.LIFELAMP.NET/LUXLAST/HOWTOINSTALL

